




STC 100/ 101/ 200/ 201

0FL-4194-000


Pipe contact temperature sensor
Anlignings temperaturgivare
Anlegetemperatursensor
... Convertisseur de sonde d'applique
... Transmisor de temperatura aplicada
Sensore temperatura testa DIN

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni

1.

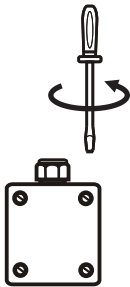

2.

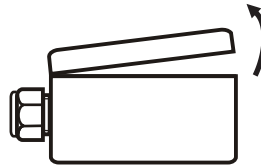

3.

